

FRONT

ENERGEA

AMPCHARGE PD30

WALL CHARGER WITH POWER DELIVERY & QUICK CHARGE 3.0

USER GUIDE



Features


- Power Delivery 30W
- PPS 33W
- Quick Charge 3.0
- AMPSMART Technology
- Simultaneous charging for 2 devices.

Overview

Thank you for purchasing AmpCharge PD30. This product is a convenient, easy to use wall charger featuring fast charging technology. By pairing it with your original charging cable, you can charge devices, from smartphones, tablets and even laptops.

Device Layout

1. USB-A Output
2. USB-C Output

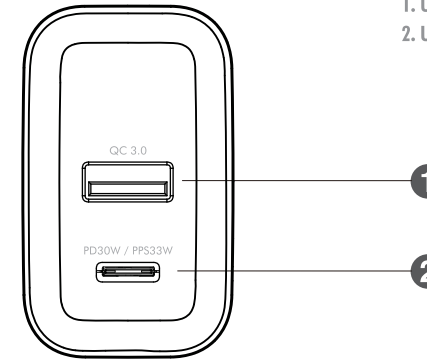

Specifications

Input	: 100-240Vac 50/60Hz 0.8A
USB-C	: 5V=3A, 9V=3A, 12V=2.5A, 15V=2A, 20V=1.5A (PD30W); 3.3V-11V=3A (PPS33W)
USB-A	: 5V=3A, 9V=2A, 12V=1.5A (QC3.0 18W)
USB-C + USB-A	: 5V=3.4A (17W)
Total Output	: 33W Max
Dimension	: 89.8 x 47 x 28mm
Weight	: 72g

BACK

Limited Warranty

This product is covered by one year limited warranty. The condition of this limited warranty and supplier's responsibilities under this limited warranty are as follows:

- You must be able to prove the date of original purchase of the unit with a dated receipt.
- The limited warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by an unauthorized third party.
- Supplier's responsibility shall be limited to the repair or replacement of the product at its sole discretion.
- Specifically exempt from any limited warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorates and other accessories.
- Supplier is not responsible, for failure resulting from accident, abuse, misuse, or any unauthorised repair, or modification.
- Modification and repair of the unit should be done by an authorised and qualified service center or returned to the manufacturer.
- This limited warranty gives you specific legal rights, and you may also have other rights, which vary under local laws.

Instruction for the Use of Product

- a) The product will generate heat when charging. Always charge in a well ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- b) Keep the product away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
- c) Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the product.
- d) Do not subject the product to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy object on the product.
- e) Do not short-circuit the product or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- f) Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- g) Product usage by children should be supervised.
- h) Please read the operating instructions (including charging instructions and information on the minimum and maximum operating temperature), supplied with this product.

Safety Information

Before installing and using the product, please read the instructions thoroughly and retain them for future reference.

Do not expose this product to moisture or submerge it in liquid. Keep it dry at all times.

Do not intent to open or disassemble the product, such action will void the warranty. This product is meant for use in conjunction with the appropriate mobile device. Please check your device packaging to determine whether this product is compatible with your particular mobile device. Manufacturer is not responsible for any damages to any mobile device incurred through the use of this product.

Avoid dropping and extreme temperature. Improper use of this product may result in product damages, excess heat, toxic fumes, fire or explosion, any which Energea are not held responsible.

Do not store product in high temperature environment, including intense sunlight heat. Do not place product in fire or other excessively hot environments.

Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and contact manufacturer or dispose of it in an appropriate manner at your local recycling center.

Caution: If AmpCharge PD30 is not working while charging, check to see if the cable is firmly connected, or if your device's charging cable is working. Do not puncture or open AmpCharge PD30 or expose it to water, fire or high temperature. If a bulge appears on AmpCharge PD30, stop using it.

