

nutribullet®

XXL DIGITAL AIR FRYER



User guide.

Important safeguards and cautionary information.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your NutriBullet® XXL Digital Air Fryer. When using any electrical appliance, basic safety precautions should always be observed, including the following **important information.**

WARNING: To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.

PERSONAL SAFETY



DO NOT TOUCH HOT SURFACES. Never touch the inside of the of the appliance while it is operating. Always use insulated oven gloves or handle when using the appliance.

During hot air frying, hot steam is released through air vents located on the back of the unit. Keep your hands and face away from the steam and from the air vents. Use caution when removing the Cooking Basket from the appliance as there may be hot steam.

Before moving the unit, turn the unit OFF, UNPLUG the power cord, and wait for the appliance to cool.

Always turn the appliance OFF and UNPLUG from the outlet when not in use and before cleaning. Allow to cool down before assembling or disassembling parts, and before cleaning the appliance.

DO NOT leave the appliance unattended when in use.

DO NOT attempt to remove the Cooking Basket while the unit is in operation. Turn the appliance off and ensure that the frying action has completely stopped before removing the Cooking Basket from the Base.

Removing the Cooking Basket too quickly may result in splattering and could potentially be dangerous.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.

Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they DO NOT play with the appliance.

The use of attachments not recommended or sold by the manufacturer may cause personal injury or property damage.

Never overfill ingredients. Leave at least 50mm of space between your food and the top of the Cooking Basket. Keep all ingredients within the basket and prevent any direct contact with the heating element.

Do not use the appliance for any other purpose than described in this manual.

PRODUCT SAFETY

FOR COUNTERTOP USE ONLY. Make sure the surface is level, heat-resistant, stable, clean and dry. DO NOT place the unit near the edge of the countertop during use. Never use a power outlet below counter which can make the cord accessible to children.

We recommend placing a heat proof mat underneath your appliance when in use, to protect your benchtop from the risk of heat damage.

DO NOT immerse the appliance, or power cord in water or any other liquid. To prevent electric shock and short-circuit, avoid any liquid from entering the appliance.

Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.

Always ensure that the Cooking Basket is thoroughly dried after cleaning and is positioned correctly before use.

DO NOT put any NON-food items into the Cooking Basket for the purpose of frying or heating. DO NOT use the appliance for deep frying with oil.

When using this appliance, provide adequate air space (at least 200mm) above, below, and on all sides for circulation.

DO NOT cover the air outlet vent, located on the back of the unit, while the unit is operating.

DO NOT place on or near a hot gas or electric burner or in a heated oven.

DO NOT place the appliance close to flammable materials such as curtains, and DO NOT place anything above or on top of the appliance when in use.

DO NOT use this appliance if any parts appear to be damaged. If you have any questions or concerns, please contact customer service (**AU: 1300 285538 / NZ: 0800 232 633**).

WARNING! This product is not intended for use outside of Australia and New Zealand. DO NOT use this product in locations with different electrical specifications or plug types. DO NOT operate with any type of plug adapter or voltage converter device, as these may cause electrical shorting, fire, electric shock, personal injury or product damage.

DO NOT modify the plug in any way.

To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

DO NOT let the power supply cord hang over the edge of a table or countertop.

DO NOT let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.

Regularly inspect the power cord, plug, and appliance for any damage. **DO NOT operate any appliance with a damaged cord or plug or if the appliance**

malfunctions, or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.

If your NutriBullet® malfunctions in any way, immediately discontinue use and contact Customer Service. You may purchase new NutriBullet® attachments or other parts at **bulletbrands.com.au/bulletbrands.co.nz** or by contacting customer service (**AU: 1300 285538 / NZ: 0800 232 633**).

Any maintenance other than cleaning should be performed by a qualified electrician. DO NOT attempt to repair or service this appliance yourself.

This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicle or boats. Do not use outdoors.

If you have any questions or comments or if some aspect of this user guide is not clear, please contact customer service for assistance at **bulletbrands.com.au/bulletbrands.co.nz**.

**! Save these
● instructions!**



Contents.

- 08 What's included**
- 09 Assembly guide**
- 10 Control panel**
- 12 Usage instructions**
 - 12 Before first use
 - 13 Assembly
 - 13 Using the Air Fryer
- 16 Care & maintenance**
 - 16 Replacement parts
- 17 NutriBullet® XXL Digital Air Fryer
One-year limited warranty**

Thank you for purchasing the NutriBullet® XXL Digital Air Fryer.

 
What's included.



base




cooking basket




crisping tray



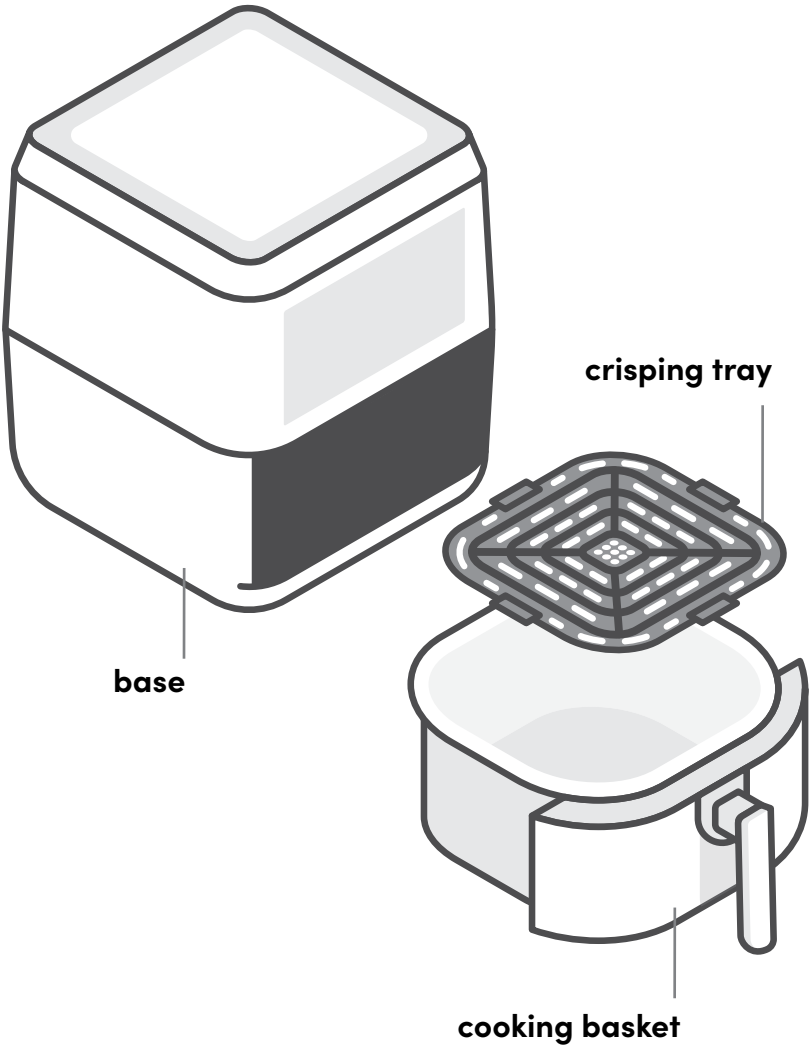 



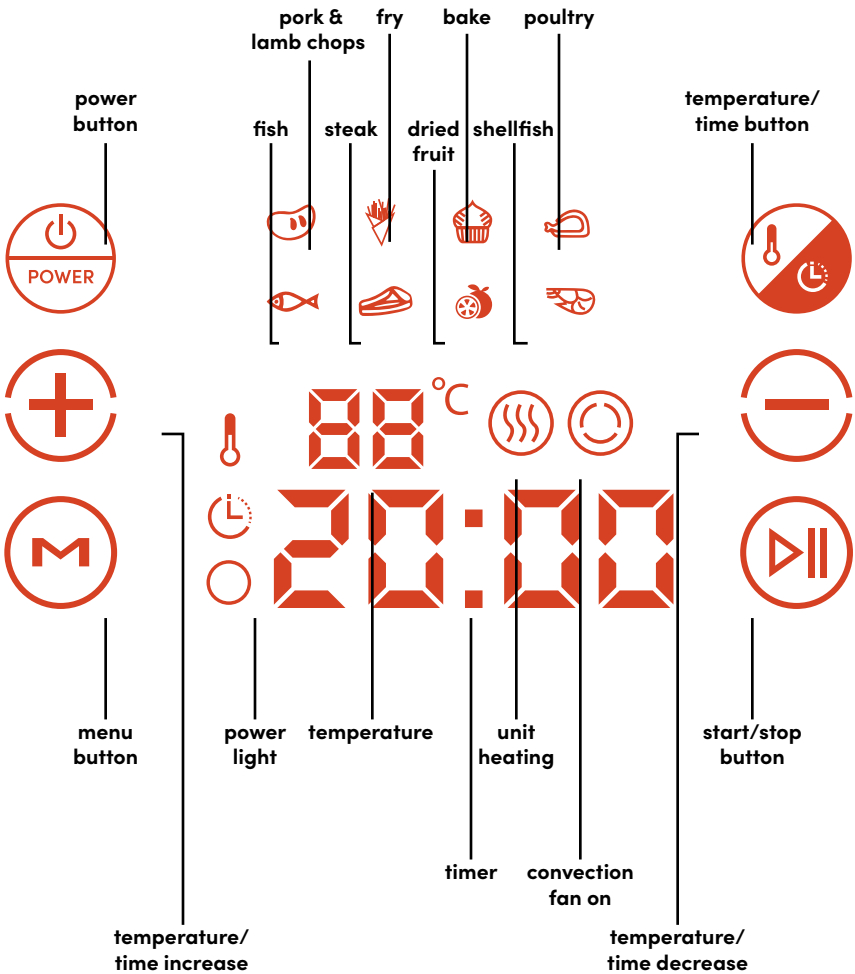 

Assembly guide.



Control panel.



To select a cooking program, press the Menu button until your desired cooking program is flashing. The program will load with its default time and temperature, as noted in the table below. To begin cooking, press the Start/Stop button.

Icon	Program	Default Temperature	Default Cooking Time
	Fry	200°C	15 minutes
	Pork & Lamb Chops	200°C	20 minutes
	Bake	180°C	30 minutes
	Poultry	200°C	20 minutes
	Fish	200°C	12 minutes
	Steak	200°C	25 minutes
	Dried Fruit	30°C	4 hours
	Shellfish	180°C	12 minutes

- The **Temperature/Time** and **+/-** buttons can be used to manually adjust your cooking temperature or time. To adjust the cooking temperature or time before cooking has started, press the **Temperature/Time** button until either reading flashes. When flashing, use the **+/-** to increase or decrease the setting. If you would like to adjust the cooking temperature or time when cooking is already in process, first press the **Start/Stop** button to pause cooking. Then press the **Temperature/Time** button to adjust each setting. Press **Start/Stop** to resume cooking once set.
- If the Air Fryer has been idle for 10 minutes, the unit will enter **Standby** mode. To wake the Air Fryer from **Standby** mode, just press the **Power** button and the full control panel will appear.
- To cancel cooking at any time, press and hold the **Power** button. The unit will power down, the temperature and time readings will flash, and you will hear a series of beeps. After 30 seconds, the **Power** button will reappear. Press the **Power** button to return to the main screen.

Usage instructions.

Before first use.

Before using your NutriBullet® XXL Digital Air Fryer for the first time, please take a moment to perform the steps below.

1. UNPACK

Open the box and remove the air fryer base with cooking basket and crisping tray, placing all parts on a flat, level, and dry surface.

2. CLEAN

Rinse **Cooking Basket** and **Crisping Tray** with hot soapy water. Wipe exterior of **Air Fryer Base** with a clean, damp cloth.

3. PREPARE COOKING AREA, ENSURE PROPER VENTILATION

 
Ensure the **Air Fryer** is used on a clean, dry, flat surface. Do not use the unit outdoors. The **Air Fryer** should be at least 20cm away from the wall when in operation, to ensure proper air ventilation behind the unit.

NOTE: To eliminate any new-machine odors that may be present, you can run the Air Fryer at its highest temperature about 5 minutes without putting any food inside.

NOTE: We suggest placing the unit on top of a heat proof mat to prevent risks of heat damage to surface of benchtop.


Assembly.

Review all warning and caution statements in the Important Safeguards section (pages 3-5) and in the section above before proceeding to Step 1.

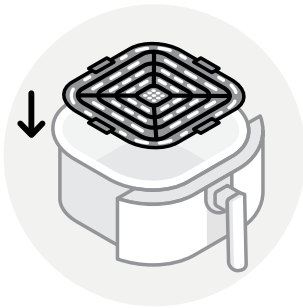


- 1 Insert the Crisping Tray into the bottom of the Cooking Basket.** Make sure the **Crisping Tray** is seated securely and is level with the bottom of the **Cooking Basket**.

 Using the Air Fryer.

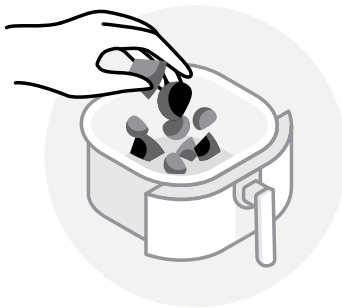


 - 1 Place food into the Cooking Basket, being careful not to overfill.** For best cooking results, leave at least 50mm of space between your food and the top of the **Cooking Basket**.

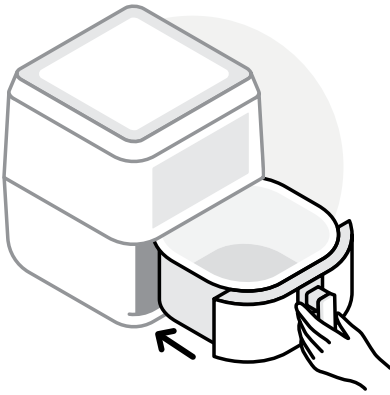


- 2. Holding the Cooking Basket by the handle, place the Cooking Basket into the Base.** Ensure the Air Fryer is properly assembled with the **Cooking Basket** fully seated inside of the **Base**.

 NOTE: The Air Fryer will not operate unless the **Cooking Basket** is installed correctly.

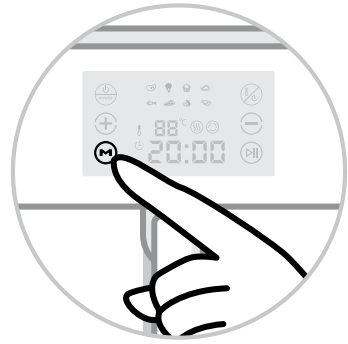

- 3 TO USE A COOKING PROGRAM:** Press the **Menu** button until your desired cooking program flashes. The default time and temperature for the flashing program will load on the **Control Panel**. Press the **Start/Stop** button to begin cooking.

 TO USE A MANUAL SETTING: To use a manual setting or to adjust a program's cooking temperature or time after it has been selected, press the **Menu** button and the display will flash. Press the **Time/Temperature** button and use the **+/-** buttons to first adjust the temperature. Once you've reached your desired temperature, press the **Time/Temperature** button again to set. Use the **+/-** buttons to adjust your cooking time. Once you've reached your desired time, press the **Start/Stop** button to set the time and begin cooking.

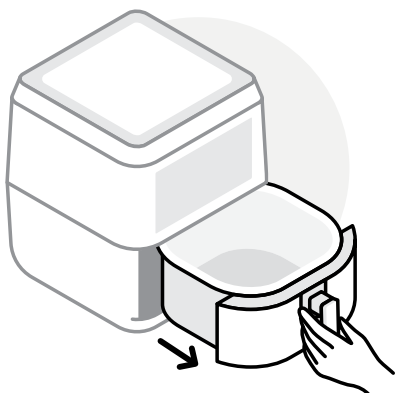

- 4 TURNING FOOD DURING COOKING:** Some recipes call for taking the **Cooking Basket** out during cooking and turning food. If so, first press the **Start/Stop** button to pause the Air Fryer. When the cooking has paused, remove the **Cooking Basket** from the **Base** using the handle. Turn your food using a utensil, and place the **Cooking Basket** securely back in the **Base**. Press the **Start/Stop** button to resume cooking. You may notice that additional time has been added to the timer so that the Air Fryer can adjust its temperature.

 
! WARNING: CONTENTS may be very hot. Use caution when removing the **Cooking Basket** as there may be hot steam. Keep your hands and face away from the steam and from the air vents.



- 5** Once the Air Fryer has reached the end of its cooking time, you will hear **5 beeps** to alert you that **the cooking has completed**. Wait a few seconds so the cooking action comes to a stop.

! CAUTION: Removing the **Cooking Basket** too quickly may result in splattering and could potentially be dangerous.

! CAUTION: Be careful when opening the **Cooking Basket** as there may be hot steam.

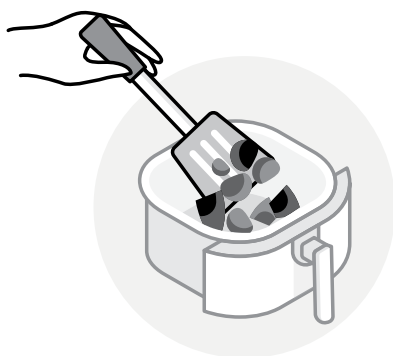

- 6** Remove the food from the **Cooking Basket** using a utensil – **NEVER** use your hands. Enjoy!

Care & maintenance.


Cleaning the NutriBullet® XXL Digital Air Fryer is quick and easy. We recommend cleaning all removable parts after each use to reduce the buildup of residue.


STEP 1:

Turn the Air Fryer **OFF**, unplug the unit, and allow it to cool down thoroughly after use.

STEP 2:


Remove the **Cooking Basket** and **Crisping Tray**. The **Cooking Basket** and **Crisping Tray** are **TOP RACK** dishwasher safe, or can be cleaned by rinsing in warm soapy water.

 **WARNING:** NEVER use the sanitise cycle – heat this high can warp the plastic.

 **CAUTION:** DO NOT use an abrasive or metal cleaning tool to clean the **Cooking Basket** or **Crisping Tray**. Doing so can damage the non-stick coating on the surface of these items.

STEP 3:

Clean the inner wall of the **Air Fryer Base** by gently wiping off any residue with a warm cotton cloth, then dry it with a dry cloth. The interior and exterior of the **Base** should only be cleaned by wiping it with a damp cloth.

 **CAUTION:** NEVER submerge the base in water or any other liquid.

STEP 4:

Once all parts have been cleaned and thoroughly dried, store the Air Fryer fully assembled in a safe, dry location.

Replacement parts.

To order additional parts and accessories, please visit our website at bulletbrands.com.au/bulletbrands.co.nz.

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**

We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.

- **For Australian Consumers:**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.



NEW ZEALAND

PO Box 100-707
NSMC
Auckland 0745
0800 285538
www.bulletbrands.co.nz

AUSTRALIA

PO Box 574
South Morang
Victoria 3752
1300 285538
www.bulletbrands.com.au

NutriBullet is a registered trademark of CapBran Holdings, LLC.
Copyright © 2021 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90025, USA. Made in China.

220-240VAC 50-60Hz 1800W

**Capital Brands Distribution, LLC | bulletbrands.com.au / bulletbrands.co.nz
All rights reserved.**

NutriBullet® and the NutriBullet logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

210625_NBA07100 (NBA-100)